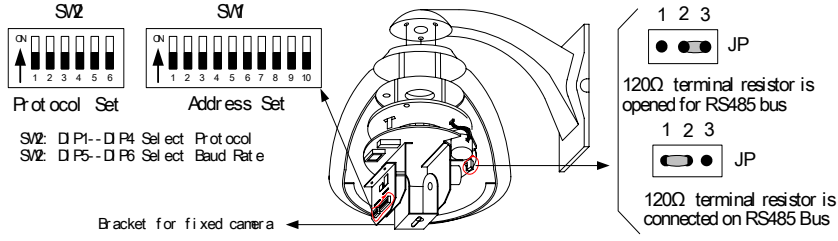Şekilde gösterilen switchlere ulaşmak için kameranın cam bölümünü ve kamerayı koruyan siyah bölümü sökünüz.

Adresleme için Dip-Switch ayarları

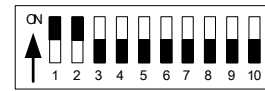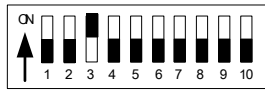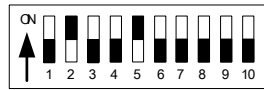| Dome Address	Dip Switchlerin Konumu									
	DIP-1	DIP-2	DIP-3	DIP-4	DIP-5	DIP-6	DIP-7	DIP-8	DIP-9	DIP-10
1	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
2	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
3	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
4	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
5	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
6	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
7	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
8	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF
9	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF
10	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF
11	ON	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF
12	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF
13	ON	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF
14	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF
15	ON	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF
16	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
17	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
18	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
…	…									
1023	ON	ON	ON	ON	ON	ON	ON	ON	ON	ON
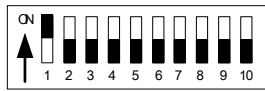
Speed Dome Address=1
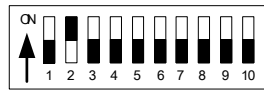
Speed Dome Address=2

Speed Dome Address=3

Speed Dome Address=4

Speed Dome Address=18

Speed Dome Address=1023

Protokol ve Baud rate ayar Switchleri:

16 Farklı Protokol desteklenir.

Protocol Türü	Switchlerin Konumu				Baud Rate	
	DIP-1	DIP-2	DIP-3	DIP-4	DIP-5	DIP-6
SAMSUNG	ON	OFF	OFF	OFF	OFF	ON
B01	ON	OFF	OFF	OFF	OFF	ON
NEON	ON	OFF	OFF	OFF	OFF	ON
Santachi	OFF	ON	OFF	OFF	OFF	ON
PELCO-D	ON	ON	OFF	OFF	OFF	OFF
PELCO-P/4800	OFF	OFF	ON	OFF	ON	OFF
PELCO-P/9600	OFF	OFF	ON	OFF	OFF	ON
PANASONIC	ON	OFF	ON	OFF	OFF	ON
Longcomity	OFF	ON	ON	OFF	OFF	ON
HUNDA600	ON	ON	ON	OFF	OFF	ON
LILIN	OFF	OFF	OFF	ON	OFF	ON
VICON	ON	OFF	OFF	ON	ON	OFF
MOLYNX	OFF	ON	OFF	ON	OFF	ON
KALATEL	ON	ON	OFF	ON	ON	OFF
VCL	OFF	OFF	ON	ON	OFF	ON
Reserved	ON	OFF	ON	ON	OFF	ON
ALEC	OFF	ON	ON	ON	OFF	ON
Ultrak	ON	ON	ON	ON	OFF	ON

Baudrate Switch Konumları

Position of Dip-Switch / Baudrate	1	2	3	4	5	6
2400 bps					OFF	OFF
4800 bps					ON	OFF
9600 bps					OFF	ON
19200 bps					ON	ON

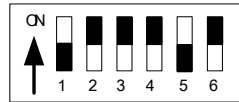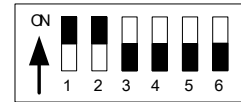**Referans amaçlı verilmiş Dip Switch ayarları**
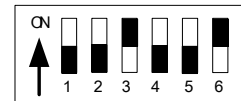
B01/ 9600Bps
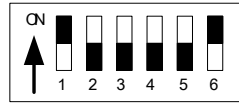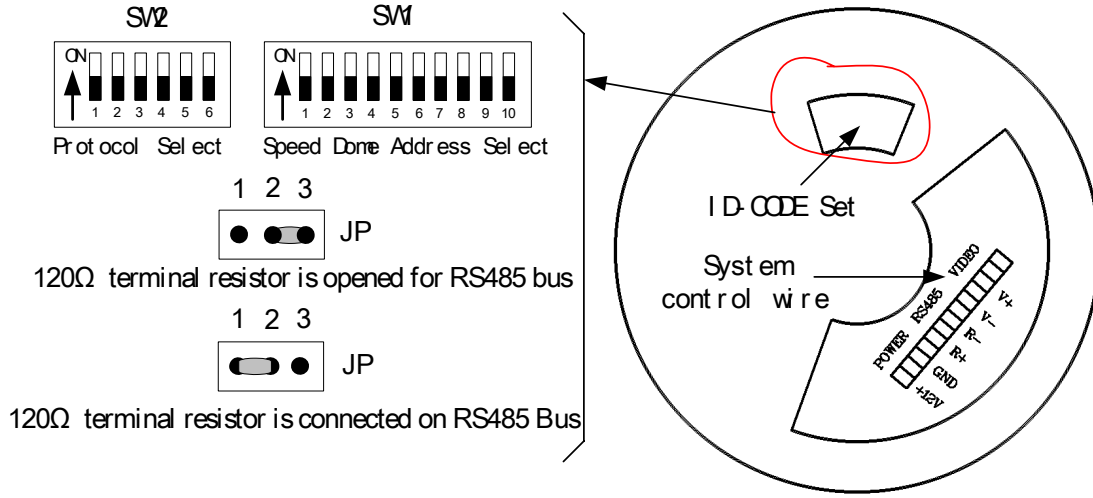

SAMSUNG/ 9600Bps
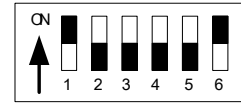
AELC/ 9600Bps

PELCO-D/ 2400Bps

PELCO-P/ 4800Bps
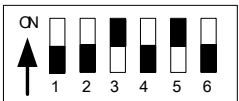
PELCO-P/ 9600Bps

İÇ ORTAM KAMERA İÇİN

SW2   SW1

ON   1 2 3 4 5 6   ON   1 2 3 4 5 6 7 8 9 10

Protocol Select   Speed Dome Address Select

1 2 3

● ●● JP

120Ω terminal resistor is opened for RS485 bus

1 2 3

●● ● JP

120Ω terminal resistor is connected on RS485 Bus

ID-CODE Set

System control wire

VIDEO
V+
V-
R-
R+
GND
+12V
POWER RS485

Kameranın alt bölümünden switchlere ulaşmanız mümkündür. DIŞ ORTAM kamera için geçerli olan bütün ayarlar İÇ ORTAM içinde geçerlidir.